


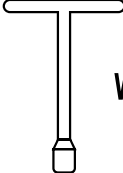


ASSEMBLY INSTRUCTIONS

ITEM# 214054


Coffee table Abandos

PARTS	QUANTITY	TOOLS	QUANTITY
A MARBLE TOP 	1	 WRENCH	1
B METAL BASE  	2		
C HARDWARE    	4		

STEP 1

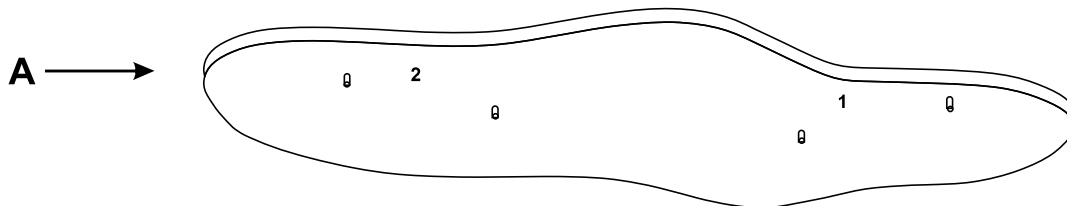


STEP 2

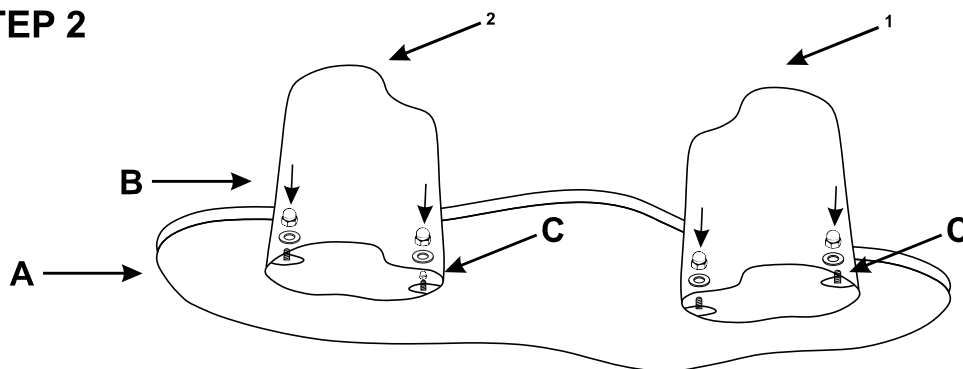

Using a second person to assist you, place Marble Top (A) upside down onto a padded, non-marring surface. Place Metal Base (B) down onto Marble Top (A) and align the holes on Metal Base with the prethreaded holes on Marble Top as shown. Secure Metal Base (B) to Marble Top (A) using Bolts(C), stacking the hardware in the order shown. Engage all bolts then fully tighten them using Wrench tool

STEP 3

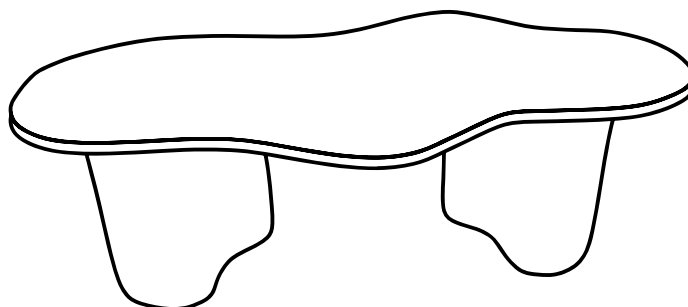

NOTES: UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PERSON.