




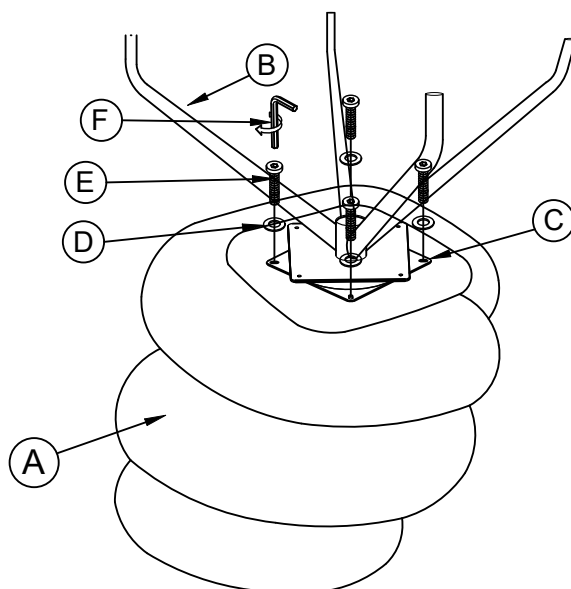

Step 1

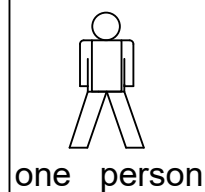

Step 2

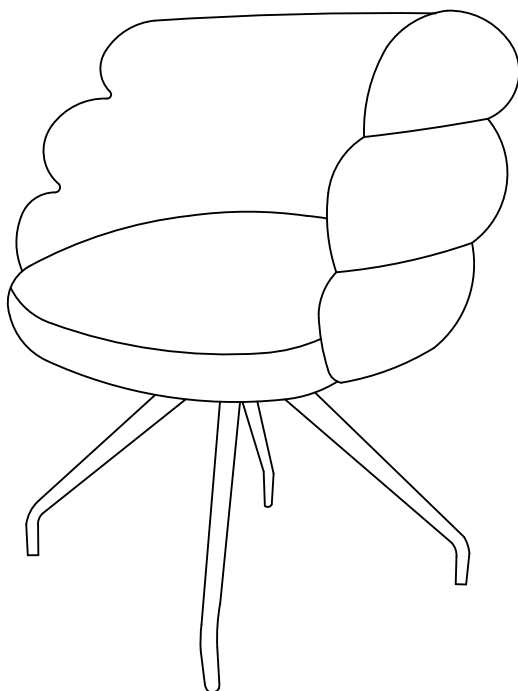

Richmond
INTERIORS

Assembly Instruction

S4629

NO:	Fittings	Qty:
A		1PC
B		1PC
C		1PC
D	Ø16xØ6	4PCS
E	M6xL16	4PCS
F	4mm	1PC